

GolfGreens™ Maintenance

Cleaning guidelines

Keeping your GolfGreens putting green clean and in good condition will protect your investment for years to come. It isn't difficult or consuming, but is worthwhile. Here is a look at things you might want to do (noted by product).

Textured nylon greens (True Putt 10/11, EZ Putt, Pro Putt & Chip)

These greens require very little maintenance. Keep loose debris off (leaves, grass clippings, etc). This can best be done with a blower. If needed, you can also use a push boom or plastic leaf rake.


If the green gets dusty or dirty, it can be sprayed with water to rinse it off. Once a year, maybe after winter, it would be good to water down the green and roll it with a weighted water roller.

If the green is in a shaded, damp area, over time, mildew could begin to develop. You can head this off by treating with a spray to help reduce or eliminate this. If you encounter anything beyond what is discussed here, please contact your local dealer, or contact the ForeverLawn Home Office at 866.992.7876.

Sand filled poly greens (Pin Seeker)

Due to the construction of the green and the type of blades, these greens require a little more maintenance. Keep loose debris off (leaves, grass clippings, etc). This can best be done with a blower. If needed, you can also use a push boom or plastic leaf rake. It is also important to have a regular grooming schedule with a push broom, or maybe even a power broom, to keep the sand level even and loose.

If the sand begins to pack down very hard, it is good to use a tool with spikes (like a Garden Weasel) and roll over the green to keep the sand from packing too tight. Wet the green first, then run the tool over the green. Follow that by brooming the green, then roll it with a weighted roller.

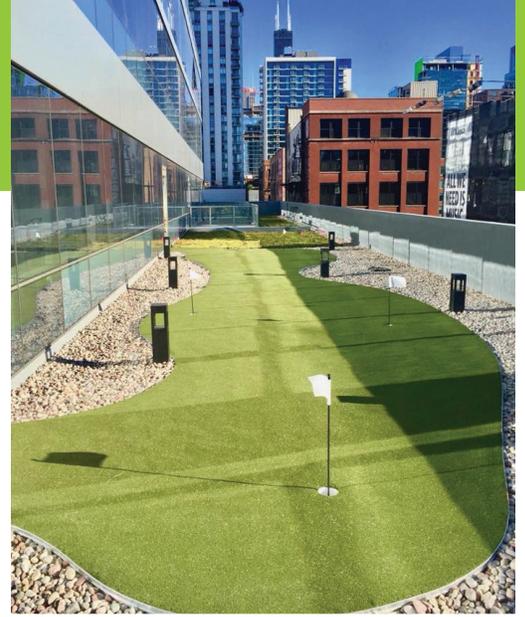

PLEASE NOTE: Due to a rise in the use of low-E windows and reflective siding, there has been an increase in damage to exterior vinyl and plastic household items including artificial turf. Care should be taken to ensure that your ForeverLawn is not exposed to intense light reflections that may cause curling or melting of the grass fibers. Items that may cause magnified light issues include, but are not limited to: low-E windows, reflective siding, glass tables, clear plastic toys, and other translucent or reflective surfaces.

Grass without limits.®

ForeverLawn®

Maintenance Guidelines



If the green gets dusty or dirty, it can be sprayed with water to rinse it off. Once a year, maybe after winter, it would be good to water down the green and roll it with a weighted water roller.

If the green is in a shaded, damp area, over time, mildew could begin to develop. You can head this off by treating with a spray to help reduce or eliminate this. If you encounter anything beyond what is discussed here, please contact your local dealer, or contact the ForeverLawn Home Office.

Here are some simple do's and don'ts for your new GolfGreens by ForeverLawn:

Do:

- Enjoy.
- Play on.
- Use.
- Entertain on.

Don't:

- Don't expose to direct high heat (fire, coals, the engine of a weed eater or blower, or a lid from a grill, etc.) It is plastic and will curl or melt when exposed to high heat.

- Don't get paint on your ForeverLawn.
- Don't use fertilizer on ForeverLawn. It actually won't hurt it, but it isn't needed either.
- Don't mow or use power lawn care equipment on ForeverLawn.
- Avoid using harsh chemicals directly on ForeverLawn. For sanitation and cleaning we suggest enzymatic cleaners and disinfectants.

OK:

- If treating weeds, it is OK to spray weed killer on ForeverLawn.
- If treating insects, it is OK if the insect killer or repellent comes in contact with ForeverLawn.
- It is OK to trim natural grass near the ForeverLawn, as long as care is taken to avoid direct contact between the blades or wire of the power equipment and the ForeverLawn product.

Improve your landscape and your short game.



General turf maintenance guidelines

Use of Power Equipment and Motorized Vehicles

It is OK to trim natural grass near the GolfGreens, as long as care is taken to avoid direct contact between the blades or wire of the power equipment and the GolfGreens product. Do not mow or use power lawn care equipment on the turf. If your GolfGreens are adjacent to natural grass, the natural grass can be carefully mowed, but only if the ground is level. If the mower tips or slants, a blade may cut into the grass and damage the backing. Use of equipment (other than a broom, plastic rake, leaf blower, or water hose) such as vacuum sweepers, heaters, or snow blowers shall be at the risk of the user, as ForeverLawn is not responsible for damage caused by such equipment.

The surface should be properly protected from sharp or pointed edges of any objects or equipment placed on the grass. Standard protective mats are recommended for this purpose.

Sparks, Flames, and Heat Producing Items

Setting hot items on the grass, such as grill lids, power equipment such as blowers or weed eaters can melt or warp the grass. Fireworks, sparklers, and other flammable items, can damage the grass and should not be used or set off on or near the grass surface.

Repairs and Replacement

Only resilient particles approved by ForeverLawn should be used as infill or infill replacement. Infill movement or replacement should only be done under the direction and approval of ForeverLawn or an authorized ForeverLawn agent.

If a grass edge comes loose, it can be reattached. If your installation used nailer boards, a pneumatic staple gun can be used to reattach it. Galvanized staples can be used or stainless steel staples, which are preferred. If a board was not used, galvanized 60 D twisted shaft Timber Tie Nails can be used to secure the edge. In the event of a loose edge, the best option is to contact your local dealer.

For additional questions or comments regarding the care and maintenance of your GolfGreens, please contact your local authorized ForeverLawn dealer.



M1141 Rev. 05/18